

Display dismantling and recycling

For ARKEN POP displays at the end of their useful life. Dismantle the unit and separate materials wherever reasonably practicable to support recycling and recovery.

1 Prepare safely

	1 Make stable Place the display in a safe, stable position.
	2 Isolate power Disconnect and safely isolate any electrical supply.
	3 Wear protection Wear suitable gloves and safety footwear. Use eye protection if fragments or breakage are possible.
	4 Dismantle and sort Remove electrical parts first. Separate the other materials as shown on page 2.

Confirm disposal arrangements



For qualifying electrical and electronic equipment, the crossed-out wheeled bin means separate collection. Do not put qualifying WEEE in unsorted municipal waste.

The LoW/EWC codes shown are indicative only. The correct code depends on where and how the product becomes waste. The waste holder should confirm the final classification and treatment route with an authorised waste provider in the country where the product becomes waste.

Codes 15 01 01 to 15 01 04 apply specifically to packaging.

Hazardous or contaminated materials require separate assessment and disposal arrangements.

2 Separate the materials

	Electrical and electronic equipment Remove first. Keep separate from general waste and use an appropriate WEEE collection and treatment route. Examples: LEDs, drivers, power supplies, cables Separate WEEE collection
	Plastics Separate by polymer where readily identifiable and use a suitable plastics recycling route. Examples: PETG, acrylic, Foamex PVC, trays, holders, fixings Indicative LoW/EWC code: 20 01 39
	Metals Remove accessible metal parts and collect separately for metal recycling. Examples: Brackets, screws, frames, trims, shelves Indicative LoW/EWC code: 20 01 40
	MDF and timber Remove other readily separable materials. Use suitable wood recycling, recovery or energy recovery facilities where accepted. Examples: MDF carcass, plywood, timber shelves and bases Indicative LoW/EWC code: 20 01 38
	Paper and cardboard Keep clean and dry. Place in the appropriate paper/cardboard recycling stream. Examples: Card graphics, inserts, paper/card components Indicative LoW/EWC code: 20 01 01
	Glass if fitted Remove carefully, keep separate and use an appropriate glass recycling route. Examples: Glass shelves and panels Indicative LoW/EWC code: 20 01 02

The LoW/EWC codes shown are indicative only. The correct code depends on where and how the product becomes waste. The waste holder should confirm the final classification and treatment route with an authorised waste provider in the country where the product becomes waste.

Hazardous or contaminated materials require separate assessment and disposal arrangements.